


How to mount accessory switches in the cup holder area.

The cup holder is surrounded by a hollow frame on the 2012 Camaro. By drilling into this area, accessory switches can be mounted for controlling various things without losing anything. The first picture shows all areas that can be used on the 2012 camaro in yellow.


The 3 rear positions have less depth than the middle and front do, but shallow switches should still fit. The 2 middle positions are curved, and switches will not lay flat. The vertical area between the cup holders can also be used, but cutting into this area will be a challenge.

If you are going to do this, I suggest verifying that the area is clear with a flashlight and a mirror before you cut anything. Stick your fingers into the areas and make sure that you have clearance there.

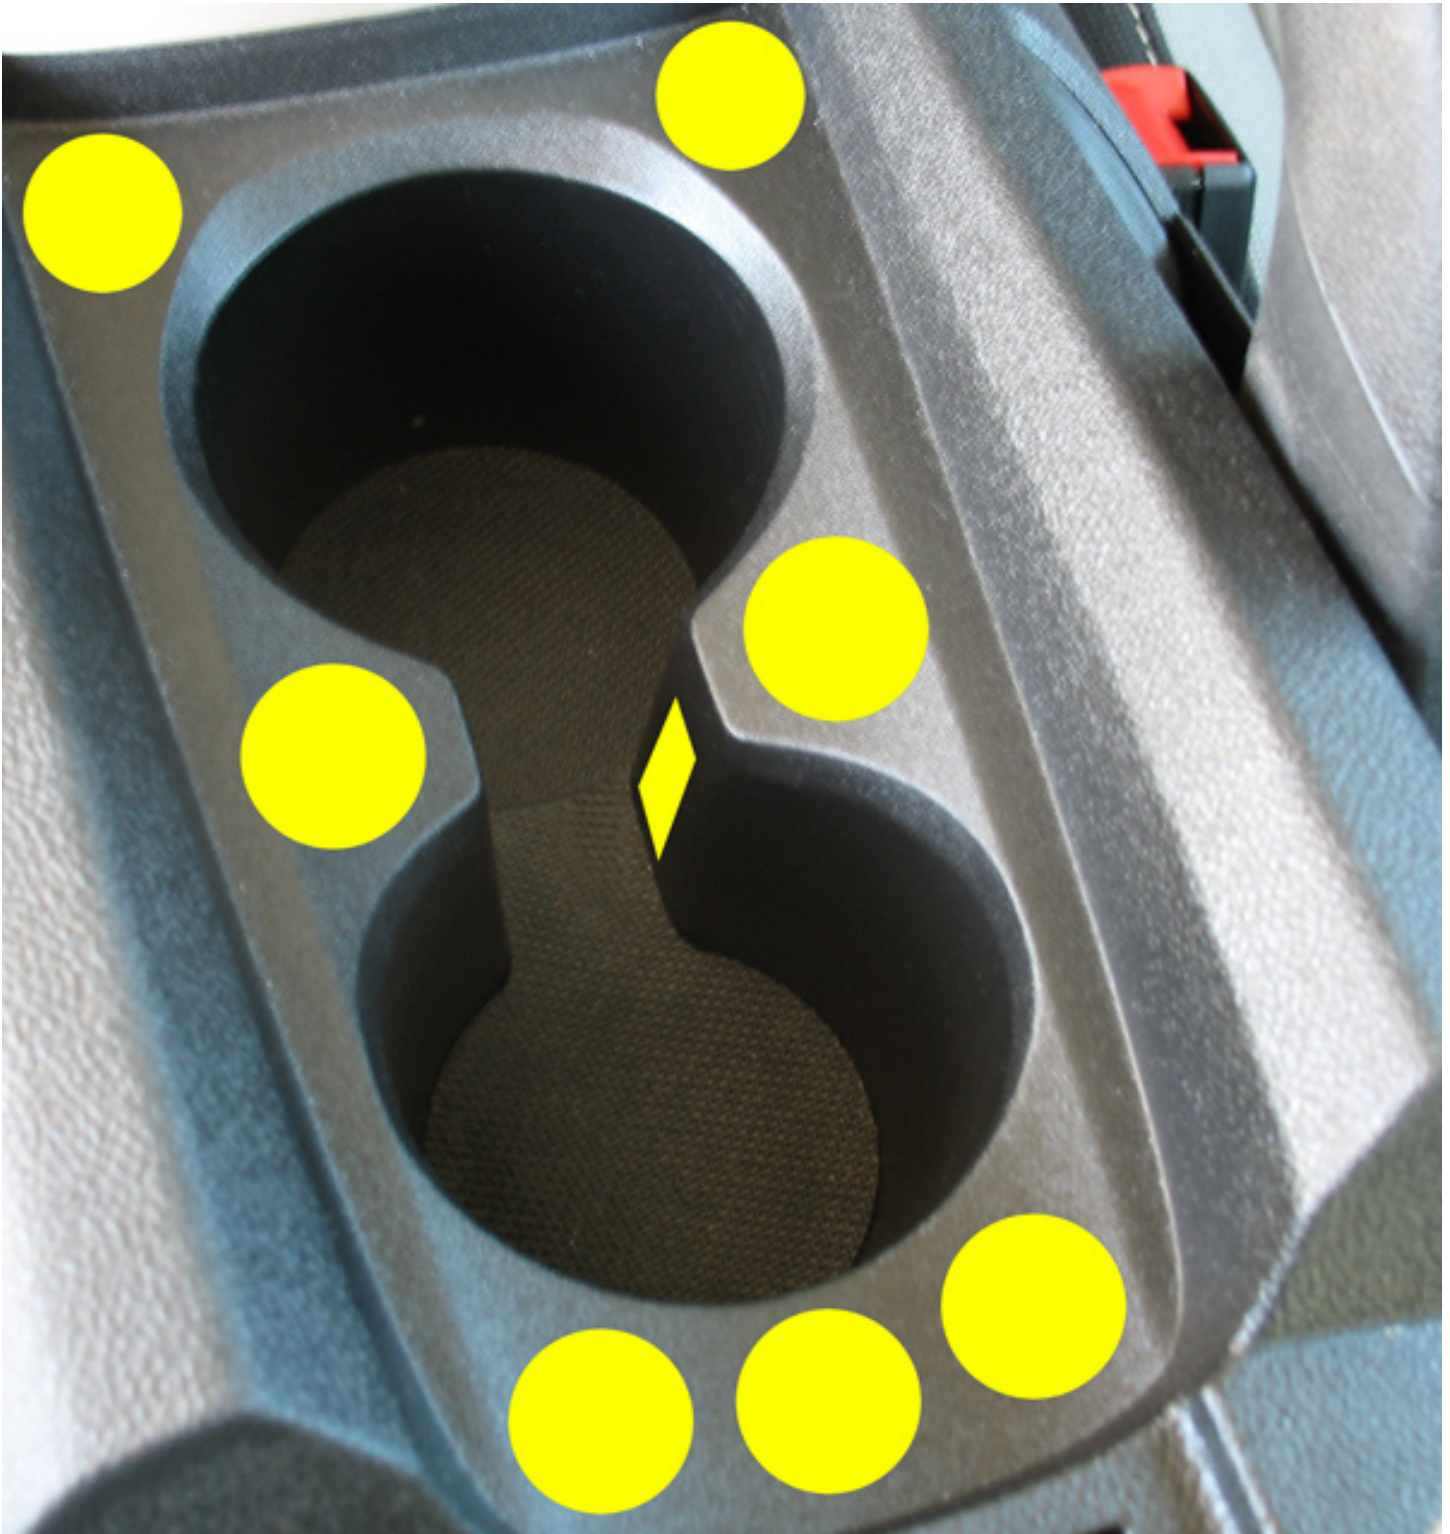




I got my switches from Parts Express here: <http://www.parts-express.com/cat/rocker-switches/1574> They are available with indicator lights, or unlit, and snap into a 20mm hole. I found a 20mm drill bit on Amazon for \$2.91 with free shipping here: <http://www.amazon.com/Amico-Drill-Hinge-Boring-Carpentry/dp/B006SVT4QQ>

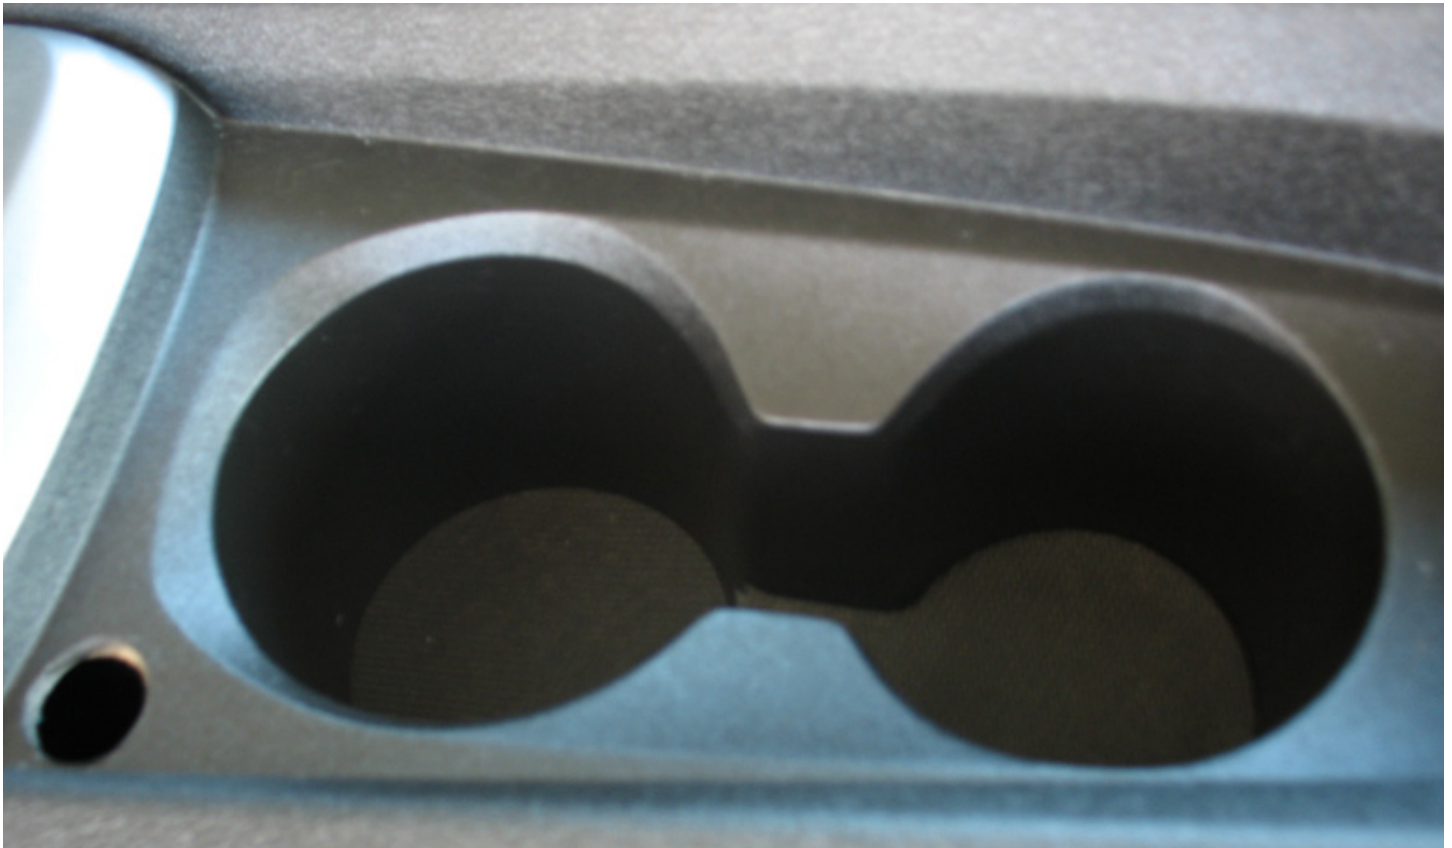




Top picture: soldered.

Bottom picture: shrink tubed.

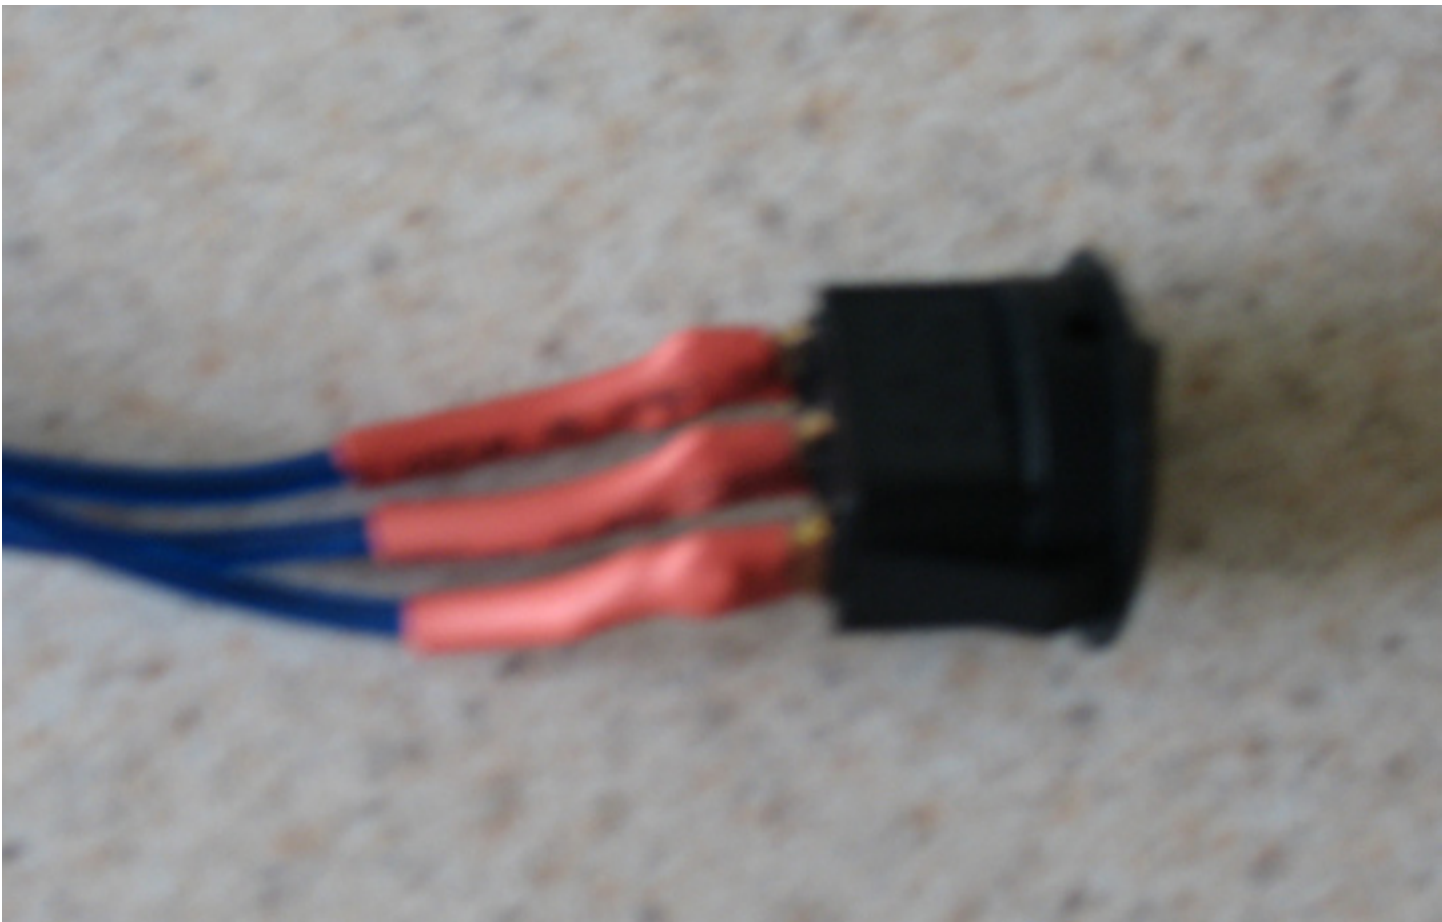

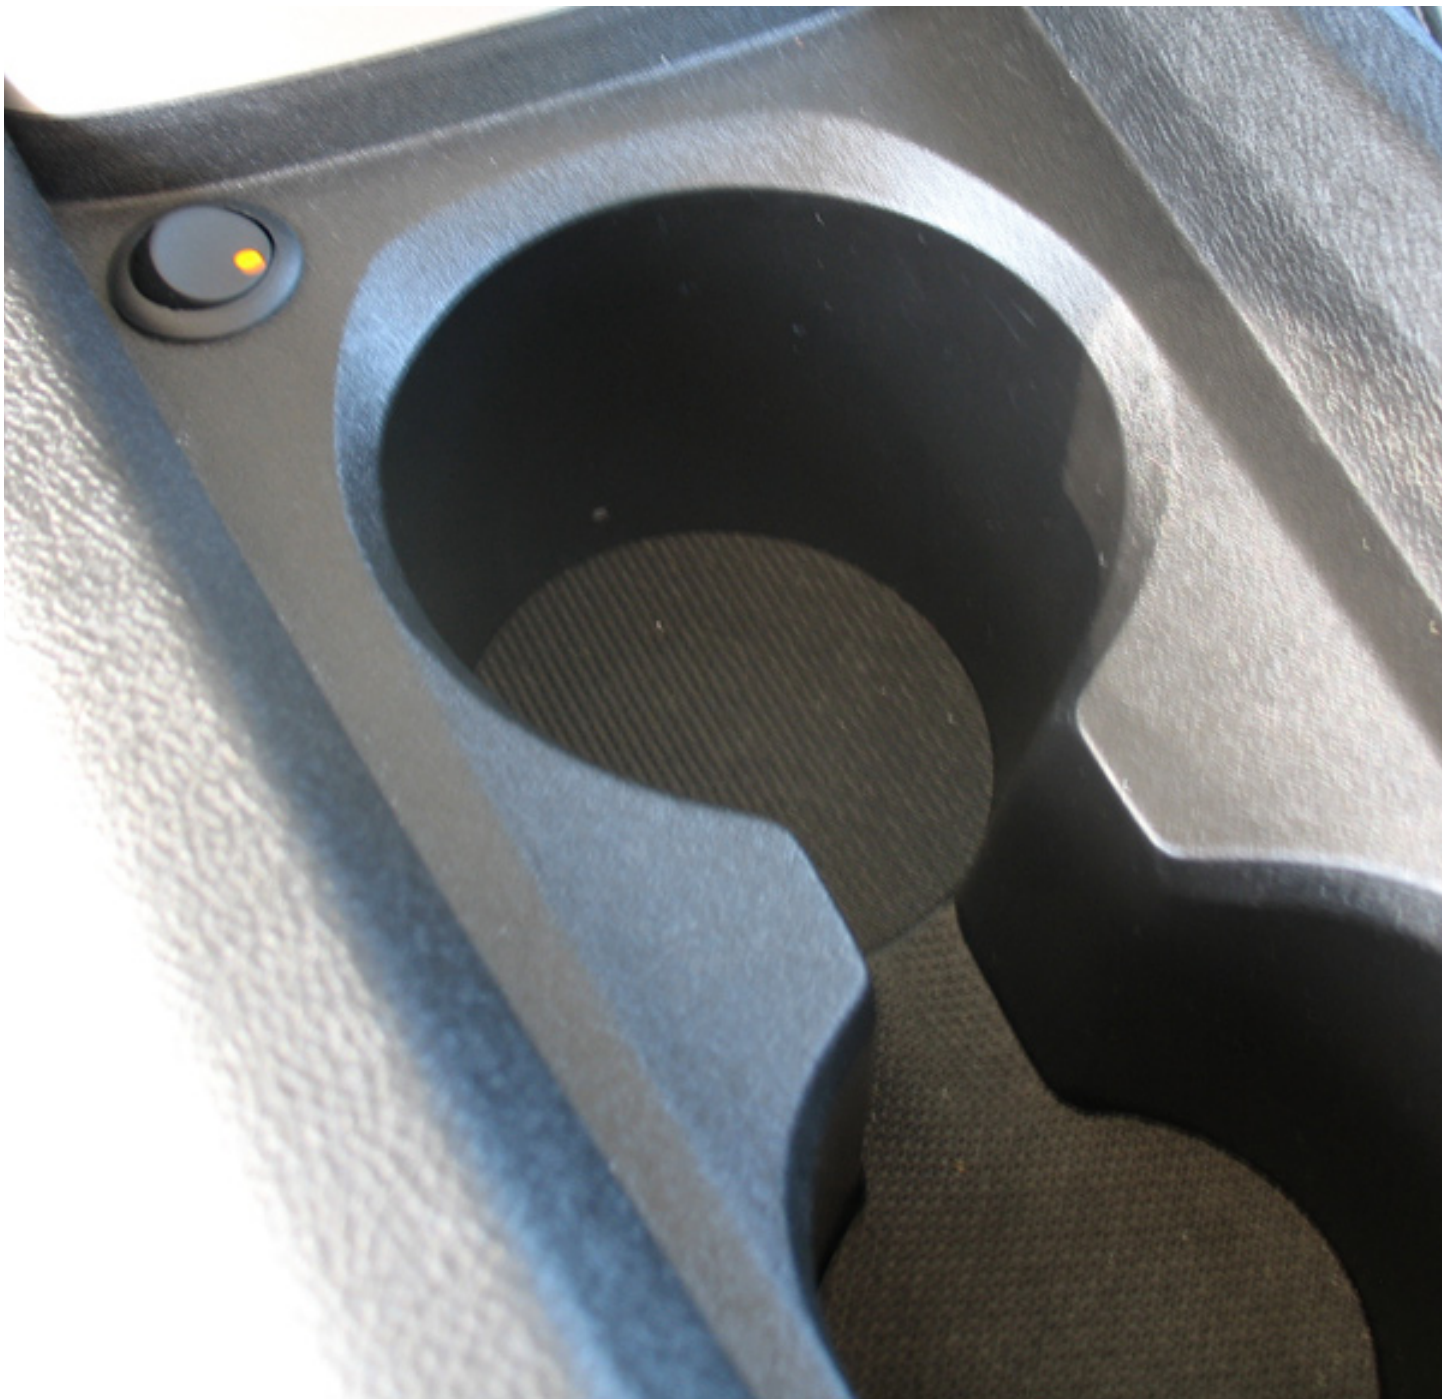

Amber light, switch working.